

COOLPIX P7000 Microscope Adapter

User's Manual

Microscopic documentation with the Nikon CoolPixP7000 and the microscope adapter“NY-P7000.”
Please refer to this manual for installation and camera settings.



Parts

**P7000
Attachment**



Main Unit
Built-in
Relay lens.



**Conversion
Ring**
Fit with
eyepieceφ30m



**C-mount
adapter**
Connect to
C-mount



Installing adapter

* First, remove lens ring as shown at right.
(Rotate counterclockwise).



* Screw camera into adapter
to install.



★ Installation to microscope on next page

■ φ30mm conversion ring,

Insert adapter all the way down the ring.
It should be fit tight.



bottom will be lined

■ C-mount adapter,

First, screw C-mount adapter into microscope's C-mount.
Second, insert main unit (with φ30mm conversion ring)
into C-mount adapter and secure with screw on the side.



no gap admitted

Installing to Microscope



Installing to Eyepiece

Insert adapter to eyepiece tube. (remove eyepiece first).

If tube's inside diameter is $\phi 30\text{mm}$, first install [conversion ring](#) to [main unit](#), then slide it into eyepiece. If tube's inside diameter is $\phi 23.2\text{mm}$, insert [main unit](#) directly into eyepiece.

* Adapter would start rotate when diopter adjusting ring is attached to eyepiece. In such case, please insert the adapter after turning diopter adjusting ring to either end.



Nikon F phototube

Insert [main unit](#) to Nikon F phototube. Recent Nikon trinocular microscopes are usually equipped with V-T phototube for F-phototube. In older models, Optiphot, Biophot, SMZ-2T trinocular are applicable. If microscope is equipped with a 35mm camera or Polaroid system, it is usually the same as the old model.

※SMZ-10 require optional sleeve.

※Adapter would start to rotate when diopter adjusting ring is attached to eyepiece. In such case, please insert the adapter after turning diopter adjusting ring to either end.



C-mount

C-mounts are usually for installing CCD cameras, which has become trendy nowadays. A C-mount has male screw of outer diameter 25.4mm. First, install [C-mount adapter](#) into microscope's C-mount. Second, insert [main unit](#) (with $\phi 30\text{mm}$ conversion ring) into [C-mount adapter](#) and secure with screw on the side..

*only direct (1.0x) C-mount is compatible. C-mount with lens inside should not be used.



Olympus PT phototube

A PT phototube has a outer diameter of $\phi 38\text{mm}$ with curving threads at the top. U-SPT, SZ-PT phototubes follow these standards. If a 35mm camera or Polaroid system is already installed, it is usually a PT phototube. It requires [fixation sleeve](#) [\[NY-BH \(option\)\]](#) to secure adapter to the microscope.



JIS phototube

JIS standard of outer diameter $\phi 25\text{mm}$, and inner diameter $\phi 23.2\text{mm}$. Old models of Olympus microscope usually employed this standard. It requires [fixation sleeve](#) [\[NY-JIS \(option\)\]](#) to secure adapter to microscope

*Able to connect without NY-JIS, however the image may come out blurry.



Camera Setting

... Camera settings for capturing quality images..


■ Main features



※ Please refer to camera's user's manual for initial setting and basic operation.

○ Easy setting • • • This is easy semi-auto mode.

- Rotate the **MODE DIAL** to **SCENE**.
- Holding down the **FUNCTION BUTTON** and rotate command dial to **LANDSCAPE**, Select and press OK.
- Rotate Zoom control to T(right). Zoom up until there will be no vignette.

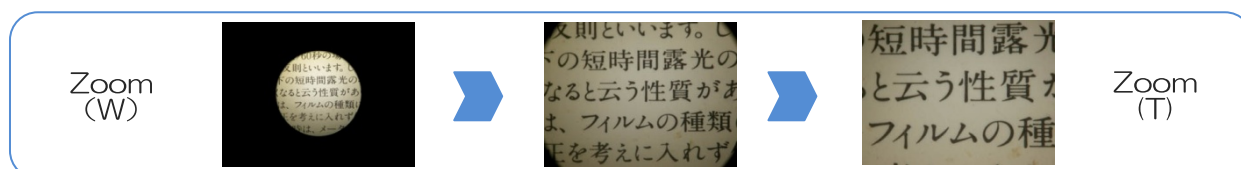

- Try focusing using focus handle of microscope while watching camera's LCD viewer.

There is a difference in focus level between the image captured by the microscopes eyepiece and the image captured by digital cameras. Please make sure to focus using the focus handle of microscopes while watching camera's LCD viewer.

- Press shutter release (or remote shutter) to capture the image.
- Press the Play button. The last picture shot will be displayed in full-frame playback mode.
- Press **EXPOSURE COMPENSATION** to alter exposure. Press the multi select or to adjust exposure.


○ Manual Setting • • If you are unsatisfied with quality of image captured by easy setting, please try manual setting.

- Rotate the **MODE DIAL** to **M (manual)**
- Press **FOCUS MODE** to display focus menu. Use the multi selector to choose **[MF]**, and press OK.
- Focus to ∞ (**INFINITE**) using **CROSS-KEY**.
- Rotate Zoom control to T(right). Zoom up until there will be no vignette.
- Set **QUICK MENU DIAL** to ISO and press **QUICK MENU BUTTON** to set **ISO sensitivity**.


*ISO sensitivity equals to camera's basic sensitivity. Higher the value, more you will be able to capture images even in darkness.

However, when ISO is set higher than 800, noise starts to appear, therefore please set low level as long as there is no shortage of light.


- Rotate the **ROTARY MULTI SELECTOR** to choose lowest **APERTURE (F#)** value

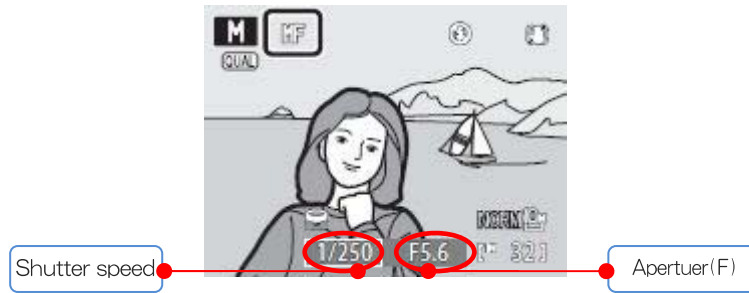

- Rotate **COMMAND DIAL** to choose **SHUTTER SPEED** value. When **SHUTTER SPEED** value become reds, keep rotating the **COMMAND DIAL** until **EXPOSURE INDICATOR** comes to center (± 0)

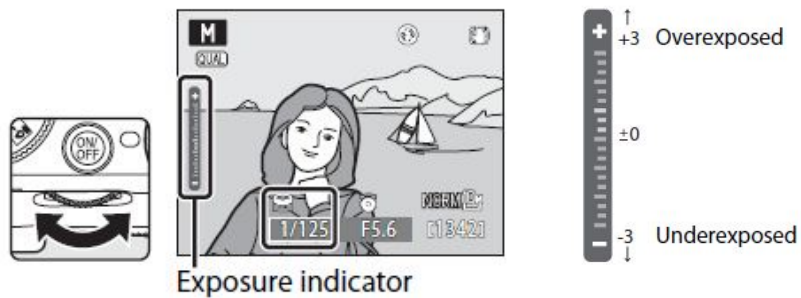


- Take a picture for a test. If image is too bright on the preview, try shorten the shutter speed (-) , if it is too dark try lengthen the shutter speed (+) .

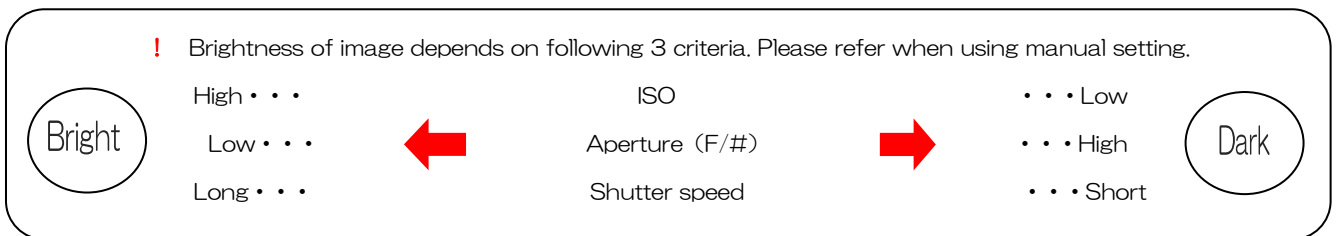

- When you have a wireless remote control (ML-L3), press **SELF-TIMER**, and select **REMOTE CONTROL**, and press OK.



- Using wireless remotes or shutter release, start taking pictures once setting is done.
-  Press the Play button. The last picture shot will be displayed in full-frame playback mode.
- **Register** the setting in mode dial **U1**, **U2**, or **U3**. Once registered, you can shoot with the same setting by just switching to this mode. Press **MENU BUTTON**. Use multi selector to choose **SAVE USER SETTING** and press OK.

Other setting . . . Please refer to User's Manual of **P7000** .

- **White Balance** . . . Manually adjust white balance according to light source. Set it manually when you cannot reproduce color of subject precisely because of the light source. [User's Manual P76-77](#)
- **Picture Control** . . . Monochrome, Vivid, etc. This is setting for image color. [User's Manual P92](#)
- **Image Size** . . . You can choose the size(pixel count) for the picture recorded. Small image sizes are suitable for pictures that will

be distributed by E-mail or used in web pages. Picture shot at large sizes requires more memory and are suitable for printing, but the number of shots that can be taken will be fewer. [User's Manual P70](#)

- **Auto off** • • • If no operations are performed for the selected length of time, the monitor will turn off and the camera will enter standby mode. When the AC adapter is connected, 30 minutes is selected automatically. [User's Manual P181](#)
- **Date Imprint** • • • Date and time of recording can be imprinted on pictures. [User's Manual P174](#)

■ Other thing you can do with Coolpix P7000


Connect to TV monitor

Using accessory video cable, P6000 can be connected to TV monitor and Out-put real time images. It is easier to focus with large display. Also observatio-n with many people can be possib.




Auto Bracketing


It enables you to capture image with varied exposure in a single shot. Use in situation in which it is difficult to guess the correct exposure.

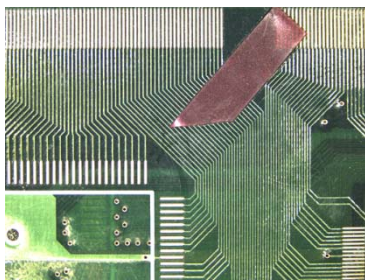

+0.3

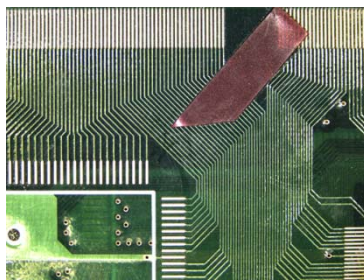

Base Pic

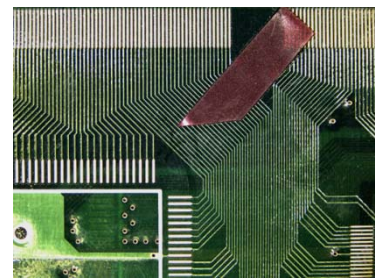


-0.3

Active D-lighting

It reduces over exposure and under exposure.

Installing ocular micrometer (sold separately)

Ocular micrometer of size $\phi 21\text{mm}$ can be installed into NY-P6000. Turn the tip of adapter counter-clockwise to remove bracket for micrometer. Put micrometer on the bracket with printed surface facing down, then reinstall to adapter body.

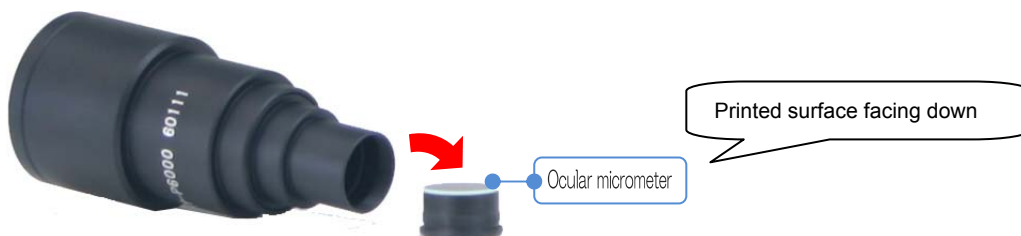

Micrometer designed for digital camera adapter 【S11-CF】

(10mm/100split pitch 0.1mm)

This special micrometer for digital camera adapter omitted the numbers entirely and moved scale to the periphery for clearer view.

